8+

SHADOW STORM



2.4G remote control ship instruction manual

1. This product uses 370 strong magnetic drive system, and adopts advanced 2. 4G frequency connection technology. The remote control distance is farther.
2. The high-performance lithium battery is configured for 7.4V1200MAH, and the speed is 20-25KM/H. The driving time is approximately 15 minutes.
3. Automatic turning technology: The ship adopts the design of tumbler. The ship has a self-overturning function, which can never overturn the ship.
4. The motor cooling system extends the service life of the model.
5. The left and right navigation rudder enhances the stability.
6. Low voltage alarm function: When the voltage is insufficient, the remote control will give an alarm.

(After the alarm sounds, please return the ship immediately to prevent the model from powering out.)

warning

1. This product is suitable for people aged over 8. It must be operated under the supervision of an adult.
2. After completing the voyage, the battery must be cooled before charging the battery.
3. When the ship is sailing, it must be ensured that there is no one in the area. There should be no aquatic or debris in the water to prevent the propeller from being hooked or damaging the ship.
4. This product has some small parts. Do not swallow to avoid the risk of suffocation.
5. Please keep a certain distance from the high-speed rotating propeller to avoid the danger of ground injury.
6. The motor is a high temperature component. Do not touch it to avoid the danger of burns.
7. Check whether the USB cable and other parts are damaged regularly. If it is damaged, stop using it until repaired.
8. When the ship model is sailing, please pay attention to safety first. If you lose control of the ship model, you must choose a safe and reliable method to retrieve it. The operator must not retrieve the ship model from the water without safety protection.

Main structure diagram of remote control ship

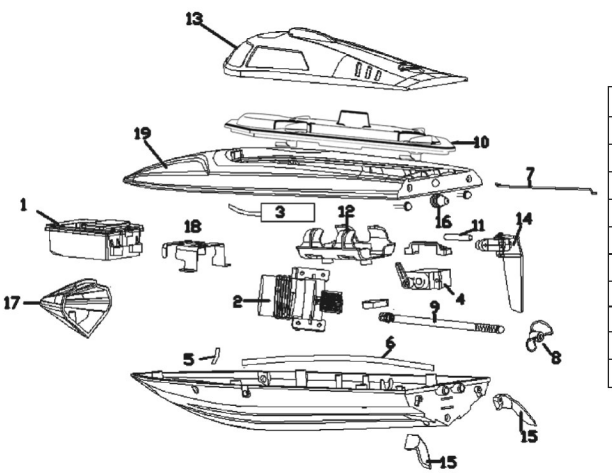

NO.	Part Name	NO.	Part Name
1	PCBA part	11	4mm steel tube
2	Motor part	12	Battery holder
3	Battery	13	Cabin cover
4	Steering engine	14	Rudder
5	3.5CM Silicone sleeve	15	Direction blade
6	20CM Silicone sleeve	16	Water proof silica gel
7	Linkage rod	17	Protect silica gel
8	Propeller	18	Motor cover
9	Drive shaft	19	Hull
10	Second cover	20	Display shelf

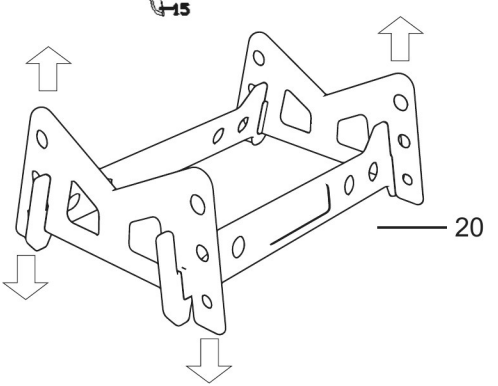

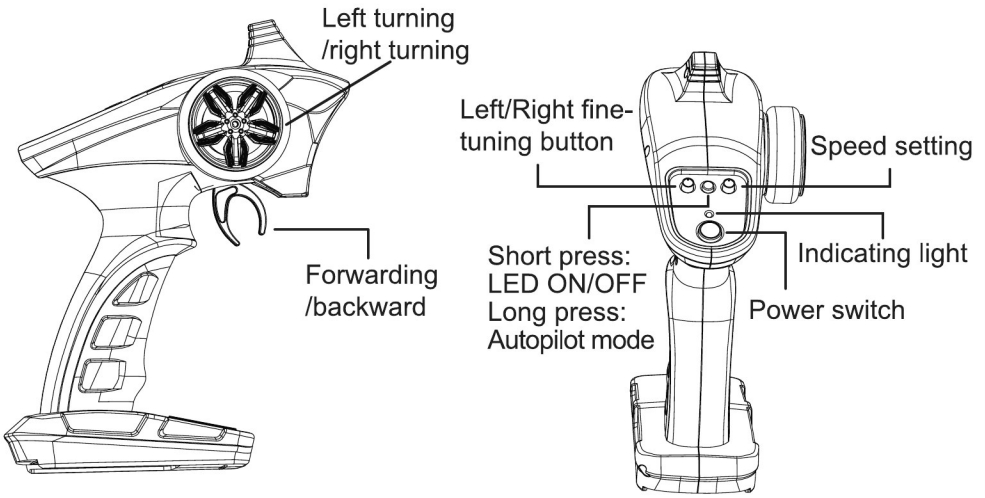

Remote control battery installation

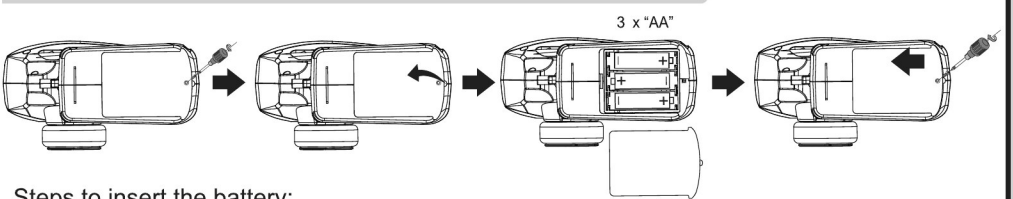

Steps to insert the battery:

Use the screwdriver to loosen the screw on the battery cover.
Open the battery cover according to the direction indicated in the photo.
Insert 3 x AA alkaline batteries and pay attention to the polarity mark in the battery box.
Install the battery cover and tighten the screw.

Charging batteries

Charging means — USB

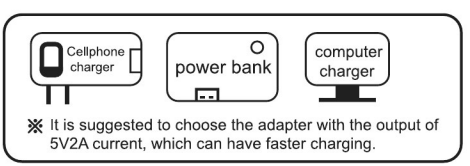



Connect the battery and USB charging cable, and then plug the USB plug into the computer or power adapter socket.
Note: The red indicator light is on when charging; the red indicator light is off when the charging is completed.
The charging time is about 120 minutes. Please charge within sight, and disconnect the charging cable when charging is complete.

Installation steps of cabin battery

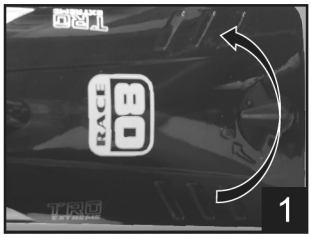

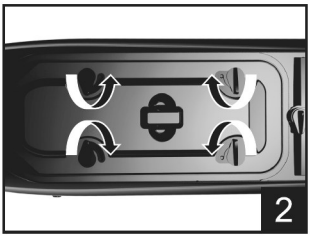

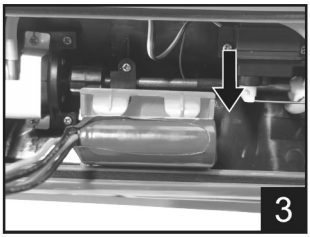

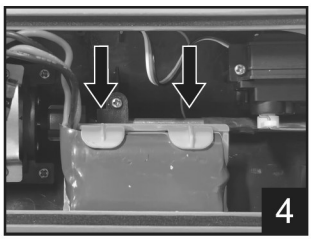

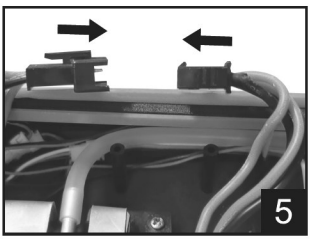

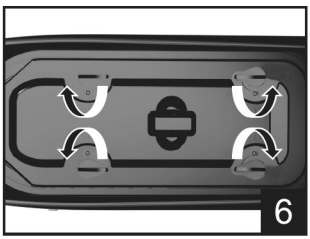

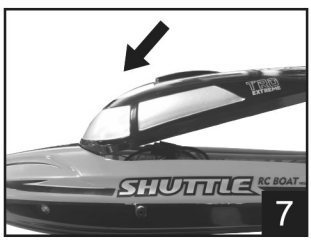

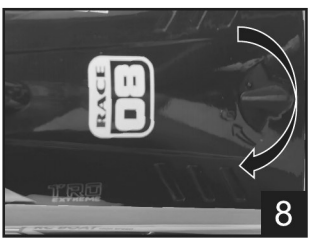

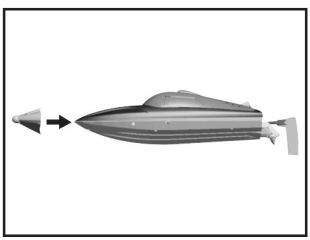

1. Unlock the lock on the cover and open the cabin as shown in the picture.
2. Unlock the locks on the second cover and open the bottom cabin as shown in the picture.

Align the bow sleeve column with the hole in the bottom of the ship and install it in place.

3. Install the lithium battery on the battery holder.
4. Make sure the lithium battery to be installed tightly on the battery holder as shown in the picture.
5. Connect the battery with power cable and make sure the installation is correct.
6. Lock the second cover as shown in the picture.
7. Insert and install the cover then lock as shown in the picture.
8. Rotate the cabin lock as shown in the picture until it is locked tightly.

1. The battery must be installed according to the correct polarity.
2. Do not mix new and old batteries.

3. Do not mix other types of batteries.
4. Non-rechargeable batteries cannot be charged.
5. Rechargeable batteries must be charged under adult supervision.
6. The power terminals must not have any short-circuit phenomenon.
7. Do not connect more than a certain number of power sources.
8. Please be sure to use the USB charging cable delivered by our company to charge the original battery, otherwise we will not be responsible for all the consequences.
9. The exhausted battery should be removed from the toy.

Linking before manipulation

After the battery is installed, put the hull into the water (note: the ship needs to be in the water to be connected to electricity),At this time, the LED light on the ship flashes, then turn on the remote control power switch, the remote control power indicator flashes Flashes and emits a sound of “DI”, the lights of the ship’s main body and the remote control change from flashing to steady on.Success, you can start to control.

Remote control instructions

1. Forward

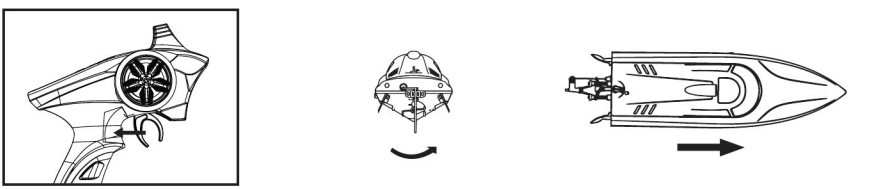

Push the throttle lever backwards and the boat moves forward

2. Backward

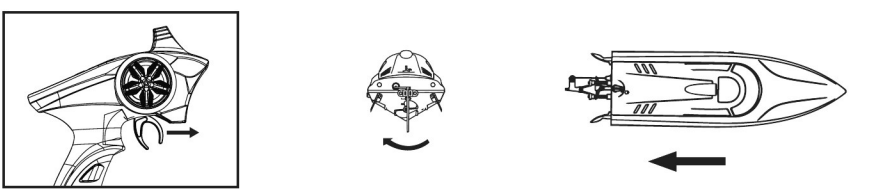

Push the throttle stick forward and the boat moves backward

3. Turn left

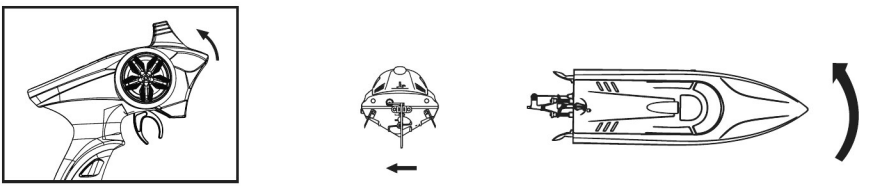

Push the steering wheel to the left when the boat is moving, the boat will turn left

4. Turn right

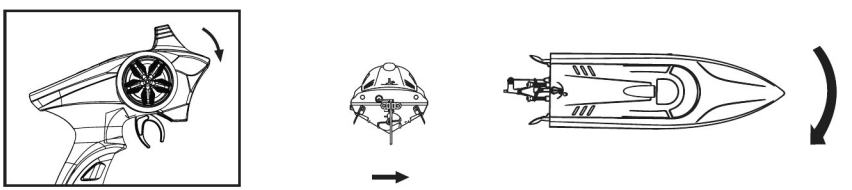

Push the steering wheel to the right when the boat is moving, the boat will turn right

5. Left fine-turning button

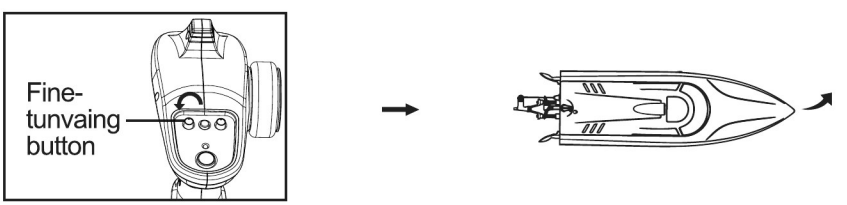

When the sailing ship automatically deflects to the right, if the operator adjust the fine-tuning button to the left, the ship will slowly return to the left until a direct flight is achieved.

6.Right fine-turning button

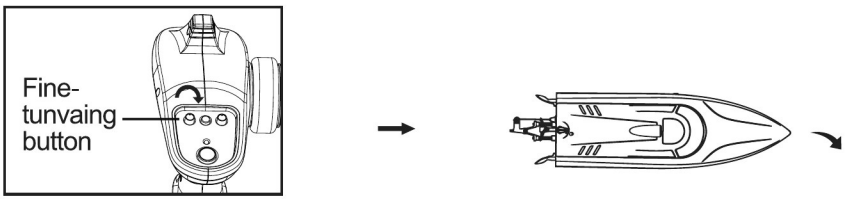

When the sailing ship automatically deflects to the left, if the operator adjust the fine-tuning button to the right, the ship will slowly return to the right until a direct flight is achieved.

7.Autopilot mode

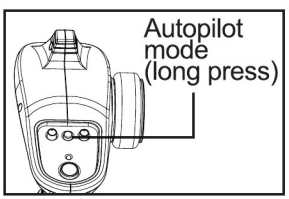

If the operator long press the button on the remote control, the ship will automatically move back and forth in the “8” shape.
Long press the button again, the ship will exit the autopilot mode.
Please perform this operation in an open area on the water surface.

8.Fast and slow gear switchover

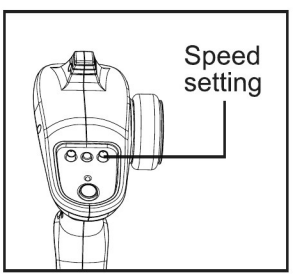

Adjust this button to set the speed.

9. LED lighting control

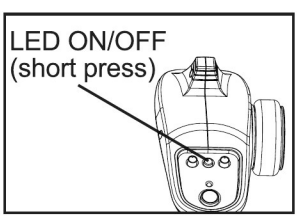

Click (short press) this button to control LED lights on the hull.

maintenance

1. When the hull is finished sailing, please take out the lithium battery from the hull.
2. The hull surface should avoid prolonged exposure to the sun to eliminate the situation of paint peeling. After use, wipe the hull clean with a dry cloth.
3. If this product is not going to be used for a long time, please remove the control battery to avoid battery leakage, thus avoiding damaging the remote controller.

Accessories description

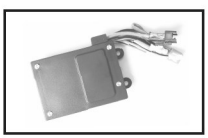
Receiving board

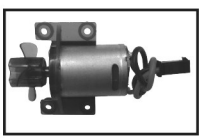
engine


battery

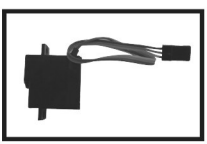
Steering engine


USB charger

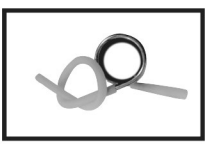
Outlet pipe

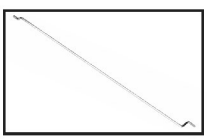
Turning engine rod

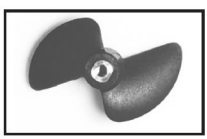
Screw propeller


link


Spindle tube

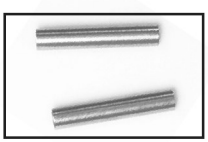
Stern rudder position tube


Hull body

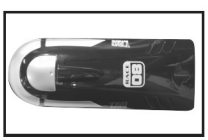
Cabin cover

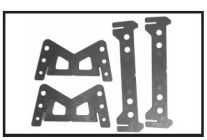
Display shelf

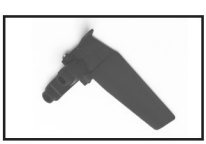
Tail


rudder


Silicone waterproof ring

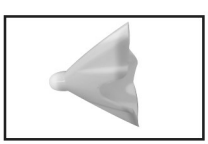
Hull anti-collision silicone